

# Indicator Light Holder

**LH 97**

This light is to be used on alternating current where space behind the panel is limited and where a light with the built-in transformers which can be mounted elsewhere on the panel and can be connected to the LH 97 to obtain the required voltages. The lamp screw shells are grounded to the case so that when the lamps are removed, there is no shock hazard to personnel.

Application with 50, 60, or 400 Hz A.C. systems.

Lamp Accomodation - W-L-00111/56 (#1769; MS15612-3)

Lenses Available - LC38 thru 45 (see page 67)



## Dimensions (Approx.)

